

Sidewall Attachment Installation


for DisplayShade®, Classic®, Aluma® and Alumashade® Frames



Carefully lift the canopy top's corners above velcro area.



Attach the sidewalls to the vertical velcro located at the top of the frame's legs on each corner.

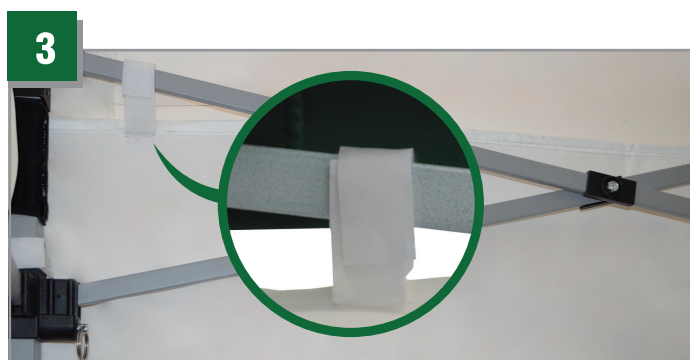

Attach all velcro straps to the truss bar valances.



Extend the frame's legs to the desired height.



Attach the remaining velcro to the frame's legs.



Carefully pull down the canopy top's corners from above the velcro area.